

Place Spirit Level on This Line to Level Product Before Drilling

### Installation Template

**Step 1:** Hold the fixing template against the wall. Allow a minimum gap of 105mm to the right of the template and 25mm above it (this is space needed for installation and maintenance).

**Step 2:** Once the drill holes are aligned correctly, mark with a pencil.

**Step 3:** Remove the fixing template from the wall and drill where marked.


Note: Where pipework and cables enter through a hole in the wall, the wall must be sealed to prevent water ingress.

**Important! Read in conjunction with the Installation Guide.**

- Do not drill into buried cables or pipes
- Do not drill through the case and into the wall as dust can cause product failure
- Thoroughly flush the pipework before connecting to the appliance
- Use the correct supply cable size: refer to BS 7671
- Do not use alternative screws to secure the cover
- Do not silicone seal around the appliance
- Do not install where the product or pipework may become frozen

Telephone: 0844 571 5000  
 Fax: 01242 282 595  
[www.mirashowers.co.uk/contact us](http://www.mirashowers.co.uk/contact-us)

This Installation Template is compatible with the following Mira Advance Electric Showers:  
 Standard 8.7 and 9.8 kW (J09A, J09D)  
 Flex 8.7 and 8.9 kW (J09G, J09K)  
 Flex Extra 8.7 kW (J09N)

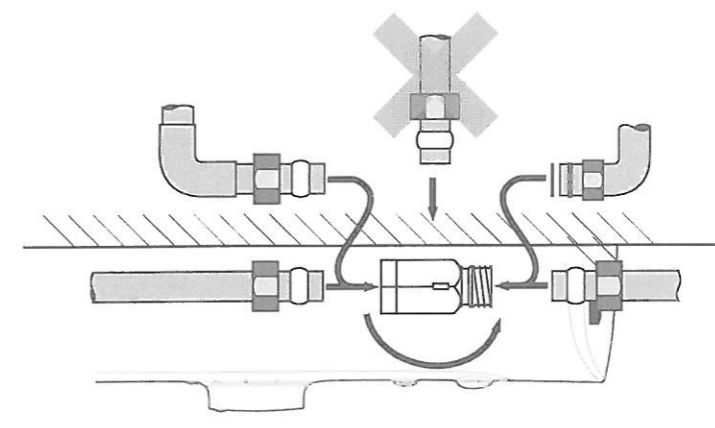

Optional Hole

1327483-W7-A

Bottom Fixing Hole

Optional Hole

Outlet Connector

Optional Hole

Bottom Fixing Hole

Inlet Connector

Electrical Connections

Bottom Fixing Hole

Optional Hole